

# USR-G806-A User Manual

File version: V1.0.4.3



# Content

<b>1. Overview</b> .....	<b>3</b>
<b>1.1. Brief introduction</b> .....	<b>3</b>
<b>1.2. Product feature</b> .....	<b>3</b>
<b>1.3. Hardware introduction</b> .....	<b>4</b>
<b>1.4. Band</b> .....	<b>5</b>
<b>2. Product Functions</b> .....	<b>8</b>
<b>2.1. Install procedure</b> .....	<b>8</b>
<b>2.2. APN</b> .....	<b>8</b>
<b>2.2.1. Create a VPN client</b> .....	<b>9</b>
<b>2.3. Networking mode</b> .....	<b>9</b>
<b>2.3.1. WAN+LAN+4G</b> .....	<b>9</b>
<b>2.3.2. LAN+LAN+4G</b> .....	<b>9</b>
<b>2.4. Common functions</b> .....	<b>10</b>
<b>2.4.1. 4G interface</b> .....	<b>10</b>
<b>2.4.2. LAN interface</b> .....	<b>10</b>
<b>2.4.2.1. DHCP Function</b> .....	<b>10</b>
<b>2.4.3. WAN interface</b> .....	<b>11</b>
<b>2.4.4. WLAN interface</b> .....	<b>11</b>
<b>2.4.5. Network Diagnosis</b> .....	<b>13</b>
<b>2.4.6. Module Name and Time Zone</b> .....	<b>13</b>
<b>2.5. Basic Functions</b> .....	<b>13</b>
<b>2.5.1. Web Server Password</b> .....	<b>13</b>
<b>2.5.2. Restore</b> .....	<b>14</b>
<b>2.5.3. Upgrade Firmware Version</b> .....	<b>14</b>
<b>2.5.4. Reset</b> .....	<b>14</b>
<b>3. Web Server</b> .....	<b>16</b>
<b>4. Contact us</b> .....	<b>17</b>
<b>5. Disclaimer</b> .....	<b>17</b>
<b>6. Updated History</b> .....	<b>17</b>
<b>Appendix: G806-A certification</b> .....	<b>18</b>
<b>ISED WARNING</b> .....	<b>18</b>
<b>FCC WARNING</b> .....	<b>19</b>

## 1. Overview

If user has any question, please submit it back to customer center: <http://h.usriot.com>

### 1.1. Brief introduction

USR-G806-A supports WAN, LAN, WLAN and 4G interface. User can access to 3G/4G network by WLAN interface or Ethernet interface.

### 1.2. Product feature

- One RJ45 for WAN/LAN port. 1 RJ45 for LAN port only. (10/100M)
- Support 1 WLAN(802.11b/g/n)
- Support Web Server
- Support LED to show work status
- Support Reload button to restore default settings by hardware way
- Support VPN client(PPTP/L2TP)
- Support one SIM card socket
- Support DDNS and port forwarding
- Support QoS and firewall

### 1.3. Hardware introduction



Figure 1 LED

LED	Function	
RSSI	The more green LEDs lighten, the signal is stronger.	
2G	2G:On 3G:Off	2G network accessing
	2G:Off 3G:On	3G network accessing
3G	2G:On 3G:On	4G network accessing
WLAN	On: WLAN enabled	Off: WLAN disabled
LAN	Blink: LAN port working	Off: LAN port not working
WAN	Blink: WAN/LAN port working	Off: WAN/LAN port not working
PWR	On: Power on	Off: Power off
Button	Function	
WPS	Reserved	
Reload	Restore default settings	

Figure 2 LED functions



**Figure 3 Interface**

### 1.4. Band

USR-G806-A has different band model to support different area. To check if the USR-G806-A works in specific country, please check which 3G/4G technology and band is used in this country and operator. Then please contrast our form of different model.

G806	Asia
G806-43	Asia
G806-E	Europe
G806-V	America Verizon
G806-A	America AT&T
G806-AU	Australia

**Figure 4 Different G806 type**

	G806 Operating Band
FDD-LTE	1
	3
TDD-LTE	38
	39
	40
	41
WCDMA	1
	8
GPRS	3
	8

**Figure 5 Band of USR-G806**

G806-43 Operating Band	
FDD-LTE	1
	3
	8
TDD-LTE	38
	39
	40
	41
WCDMA	1
	8
CDMA1X	800MHz
CDMA2000-EVDO	
GPRS	3
	8

**Figure 6 Band of G806-43**

G806-E Operating Band	
FDD-LTE	1
	3
	5
	7
	8
	20
TDD-LTE	38
	40
	41
WCDMA	1
	5
	8
GPRS	3
	8

**Figure 7 Band of G806-E**

G806-V Operating Band	
FDD-LTE	4
	13

**Figure 8 Band of G806-V**

G806-A Operating Band	
FDD-LTE	2
	4
	12
WCDMA	2
	4
	5

**Figure 9 Band of G806-A**

	G806-AU Operating Band
FDD-LTE	1
	2
	3
	4
	5
	7
	8
	28
TDD-LTE	40
WCDMA	1
	2
	5
	8
GPRS	2
	3
	5
	8

**Figure 10 Band of G806-AU**

## 2. Product Functions

This chapter introduces the functions of USR-G806-A, as the following diagram shown, you can get an overall knowledge of it.




**Figure 11 Product function**

### 2.1. Install procedure

- (1) Connect the 4G antenna and WLAN antenna to the router. (Longer one is 3G/4G antenna and Shorter one is WLAN antenna.)
- (2) Plug the SIM card in socket.
- (3) Power on the module by power adaptor and check the LED status.
- (4) Connect PC or mobile to the G806-A router via LAN interface or WLAN interface. WLAN password is "www.usr.cn".
- (5) Log in Web Server of router. (Default IP address of router is 192.168.1.1, either the username and password is "root".)
- (6) Configure APN parameters according to SIM card. Some SIM card APN can be recognized automatically.(Network->APNSET)
- (7) Configure other parameters according to user applications.

### 2.2. APN

User can configure APN parameters by Web Server. To choose the network type, please configure the LTE configuration.

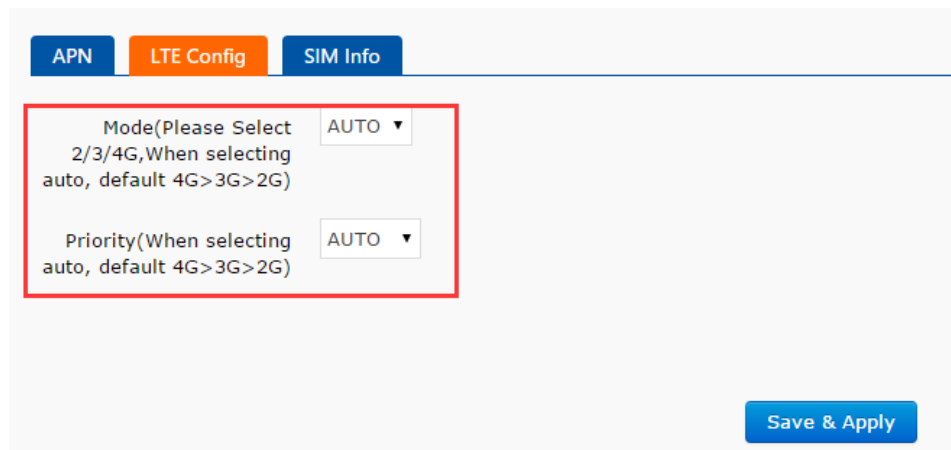

**Figure 12 LTE configuration**



## 2.2.1. Create a VPN client

User can configure VPN client function by Web Server.

## 2.3. Networking mode

### 2.3.1. WAN+LAN+4G

In this networking mode, user can access internet through WAN interface and 4G interface. WAN interface has higher priority than 4G interface to ensure communication and save 4G flows. When WAN interface occurs problems, router can change to 4G interface to connect internet. In this mode, user can also connect to router through WLAN.

To achieve this mode, user don't need to change the router's parameters. Just connect the cable to router and insert SIM card, then power the router.


Application diagram as follow:



**Figure 13 WAN+LAN+4G networking**

### 2.3.2. LAN+LAN+4G

In this networking mode, two devices can connect to router through LAN and access the Internet by 4G network. User can achieve this by Web Server as follow:

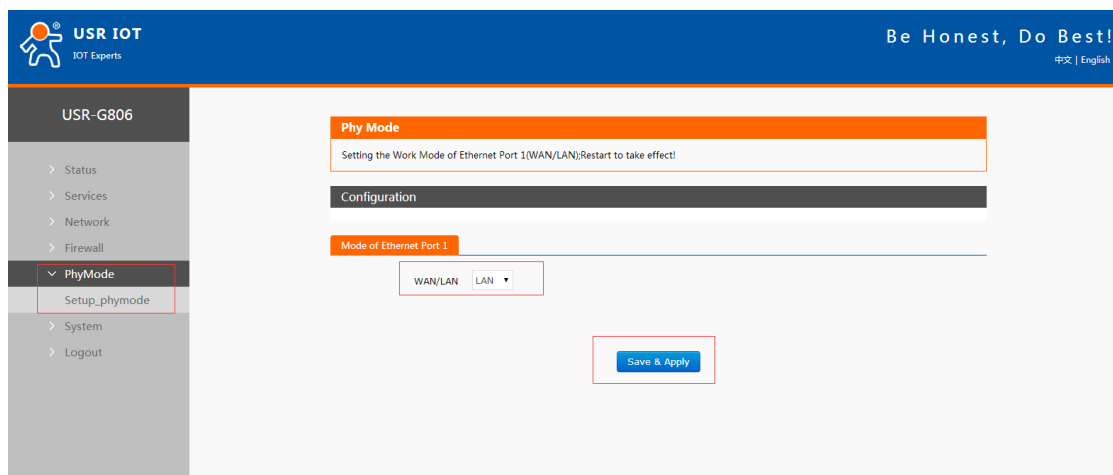

**Figure 14 Switch WAN/LAN interface**

Application diagram as follow:




**Figure 15 LAN+LAN+4G networking**

## 2.4. Common functions

### 2.4.1. 4G interface

G806-A supports one 4G interface to access internet. Functional diagram as follow:

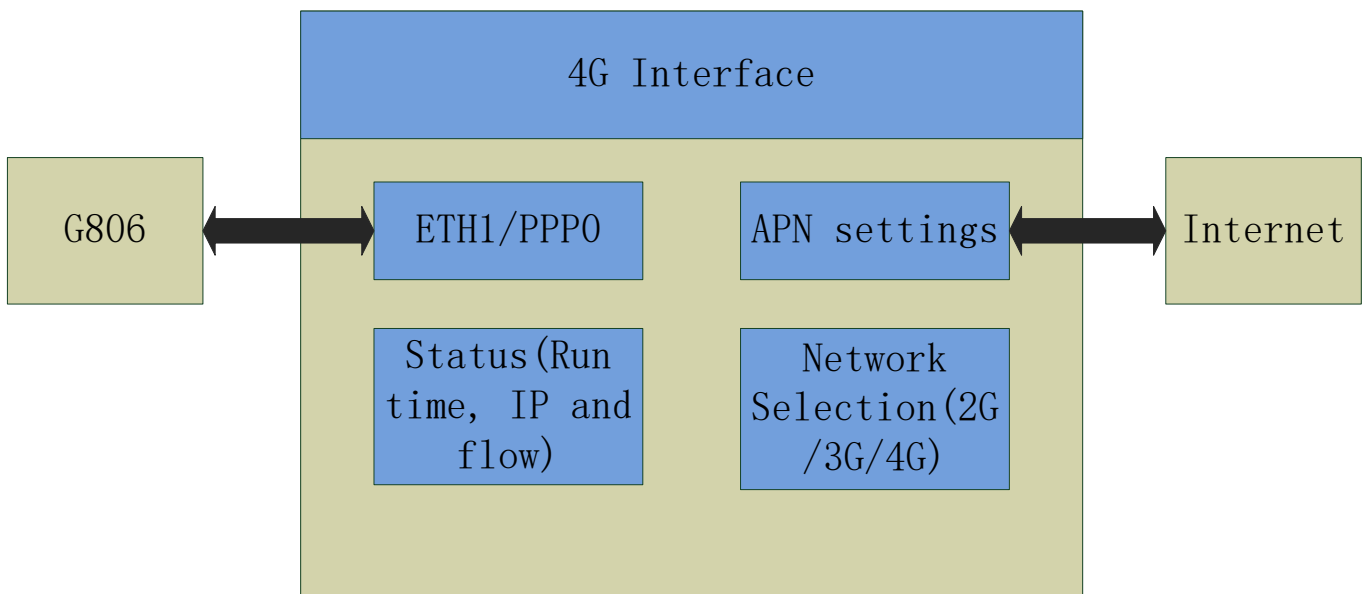

**Figure 16 4G interface**

User can configure 4G interface by Web Server.

### 2.4.2. LAN interface

G806-A supports two LAN interface (one is WAN/LAN interface).


Default settings: One LAN interface (WAN/LAN used as WAN interface; IP address: 192.168.1.1; Subnet mask: 255.255.255.0; Open DHCP function).

User can configure LAN interface by Web Server .

#### 2.4.2.1. DHCP Function

DHCP default range of distribution is from 192.168.1.100 to 192.168.1.250 and default address lease time is 12 hours. Address range and lease time can be changed.

After you enter Web Server LAN interface, you can find 'DHCP Server' on Web Server as follow:

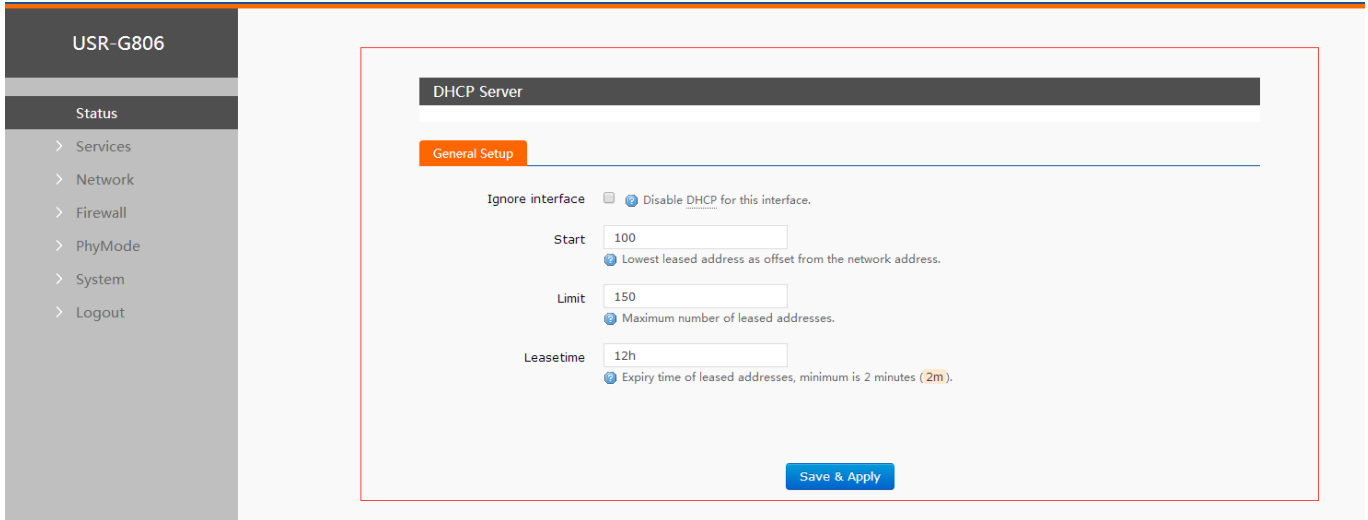

**Figure 17 DHCP function**

### 2.4.3. WAN interface

G806-A supports one WAN interface and WAN interface can switch between WAN/LAN interface. WAN interface supports DHCP and Static IP, and default setting is DHCP.

User can configure WAN interface by Web Server.

### 2.4.4. WLAN interface

G806-A supports at most 24 STA device connection.

Default parameters as follows:


SSID	USR-G806-XXXX(XXXX is MAC)
Password	www.usr.cn
Channel	Auto
Bandwidth	40MHz
Encryption Mode	WPA2-PSK

**Figure18 WALN default parameters**

User can configure WLAN interface by Web Server.


After clicking "Edit" and entering WLAN interface configuration web, user can change follow parameters.

User can configure SSID on Web Server as follow:

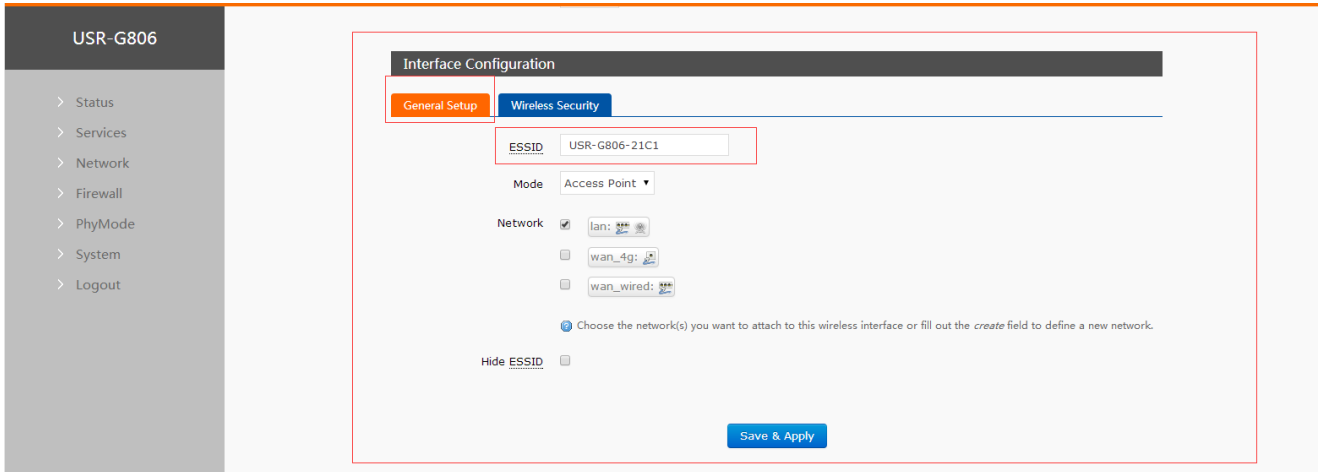


**Figure 19 Configure SSID**

User can configure password on Web Server as follow:

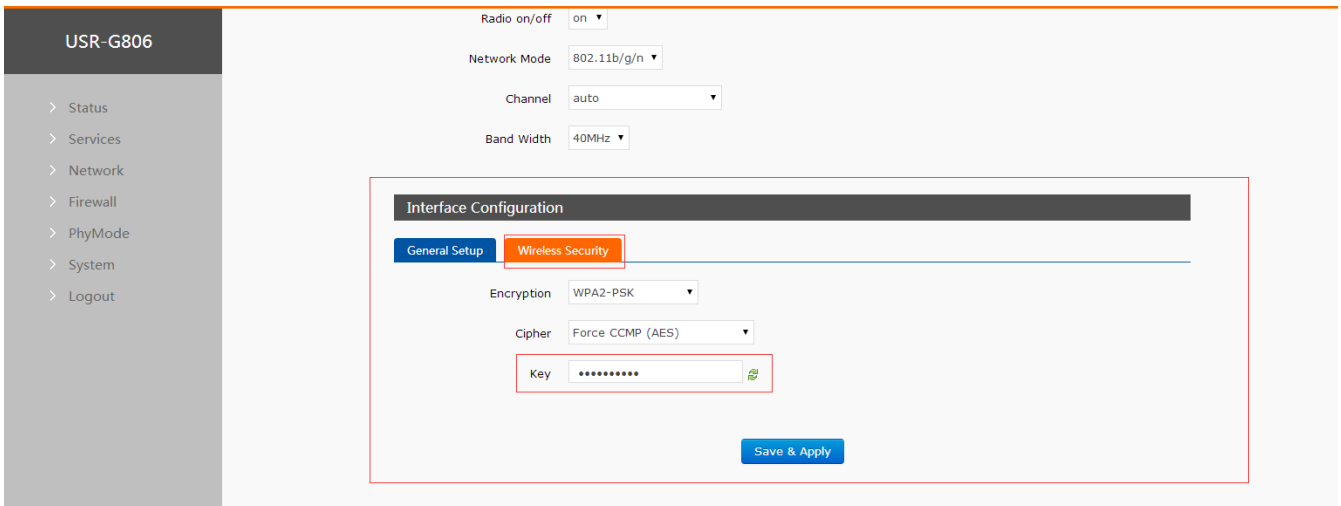

**Figure 20 Configure password**

Other settings on Web Server as follow:

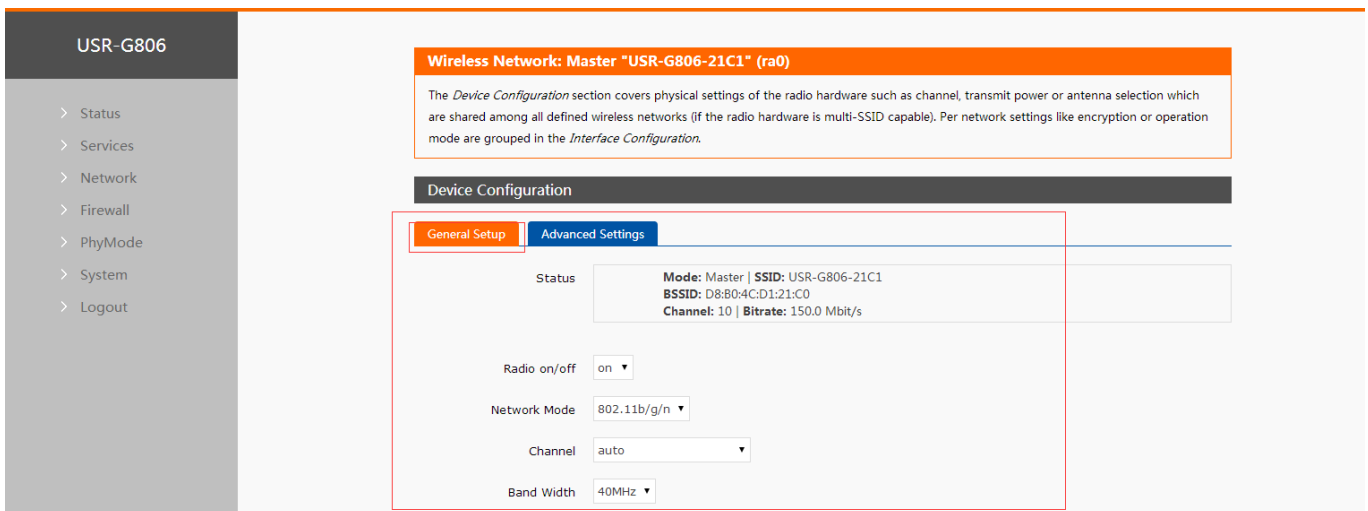

**Figure 21 Other settings**

User can close WLAN interface by changing 'Radio on/off' into off.

### 2.4.5. Network Diagnosis


User can use network diagnosis function by Web Server:

- Ping: User can do PING test to a specific address in G806-A.
- Traceroute: Can acquire routing path to visit a specific address.
- Nslookup: Can analyse DNS into IP address

### 2.4.6. Module Name and Time Zone

G806-A default module name is USR-G806-A and default Time Zone is Beijing time zone.

User can configure module name and Time Zone by Web Server as follow:

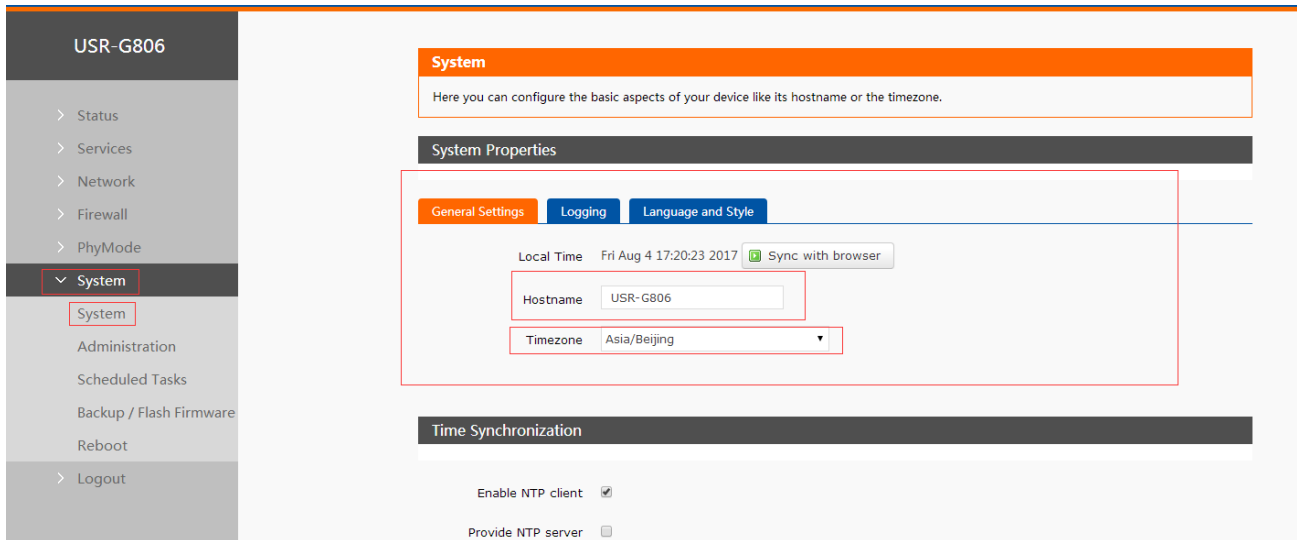


**Figure 22 Module name and Time Zone**

## 2.5. Basic Functions

### 2.5.1. Web Server Password

Default password is root, this password is used to enter Web Server.

User can change password by Web Server as follow:

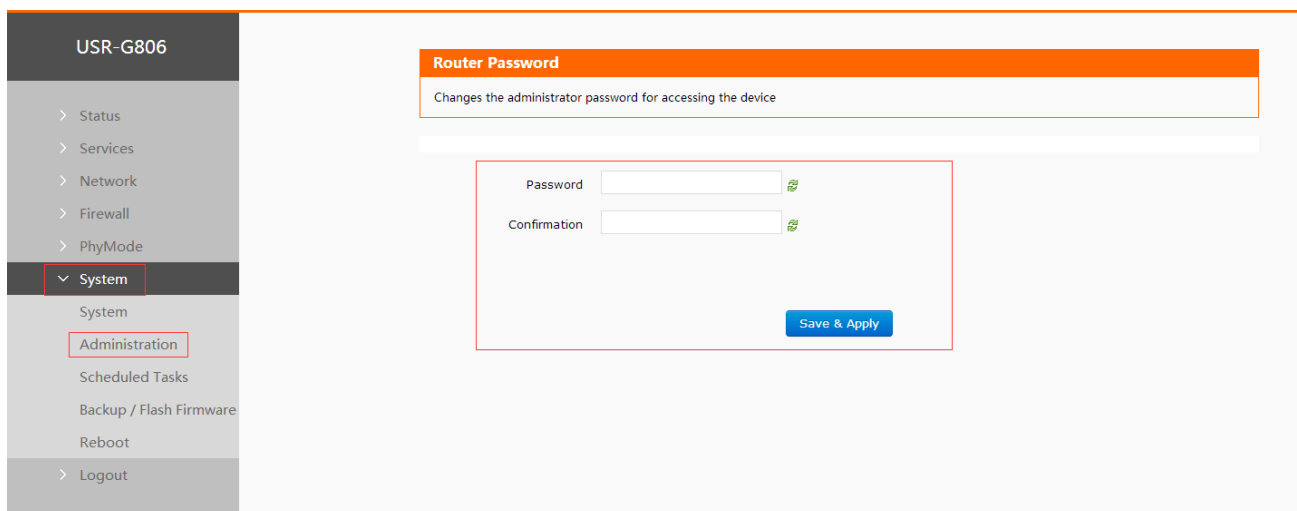


**Figure 23 Change Web Server password**

### 2.5.2. Restore

Hardware restore: Press Reload button over 5 seconds and release, G806-A will restore default settings and reset.


User can restore default settings by Web Server as follow:

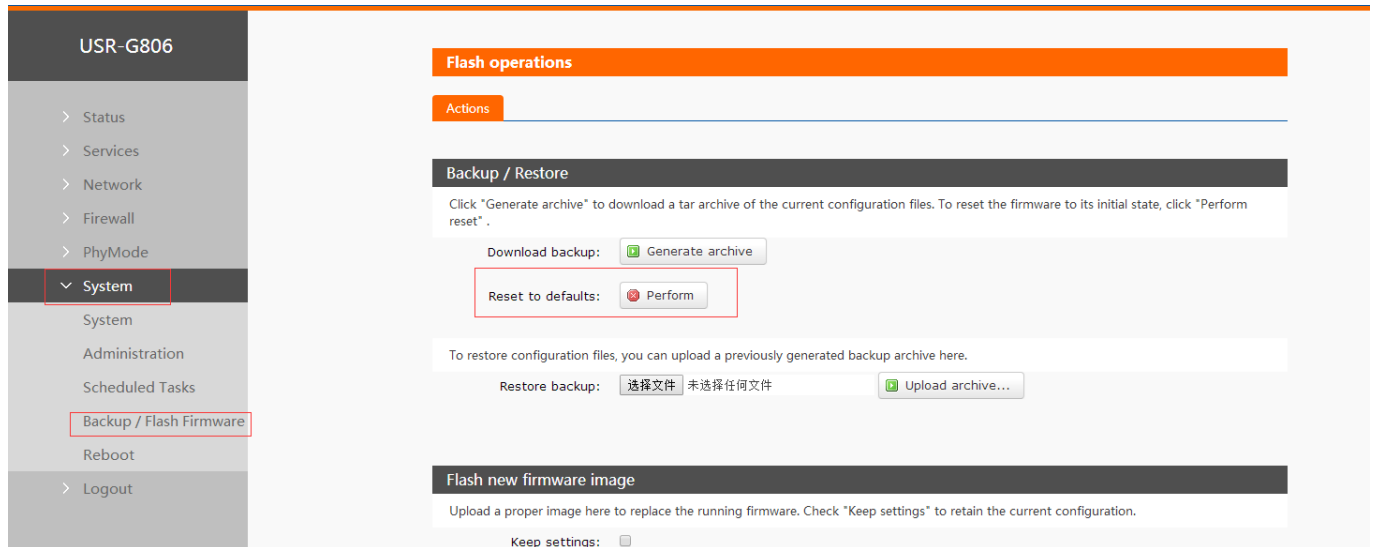

**Figure 24 Restore default settings**

### 2.5.3. Upgrade Firmware Version

Upgrade by Web Server as follow:

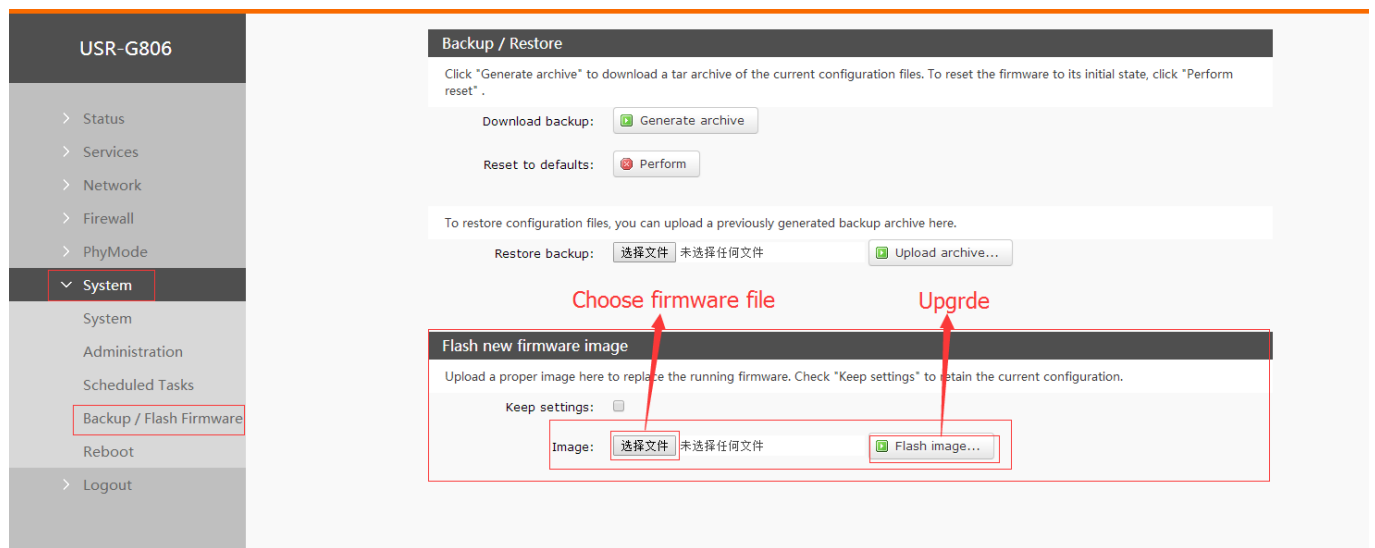

**Figure 25 Upgrade firmware version**

Note:

- The whole upgrade process will last about 1 minute, user can enter Web Server after about 1 minute.
- User can choose saving settings.
- User should keep powering up and LAN/WLAN connection during the whole upgrade process.

### 2.5.4. Reset

Reset time is about 40~60 seconds.

Reset by Web Server as follow:

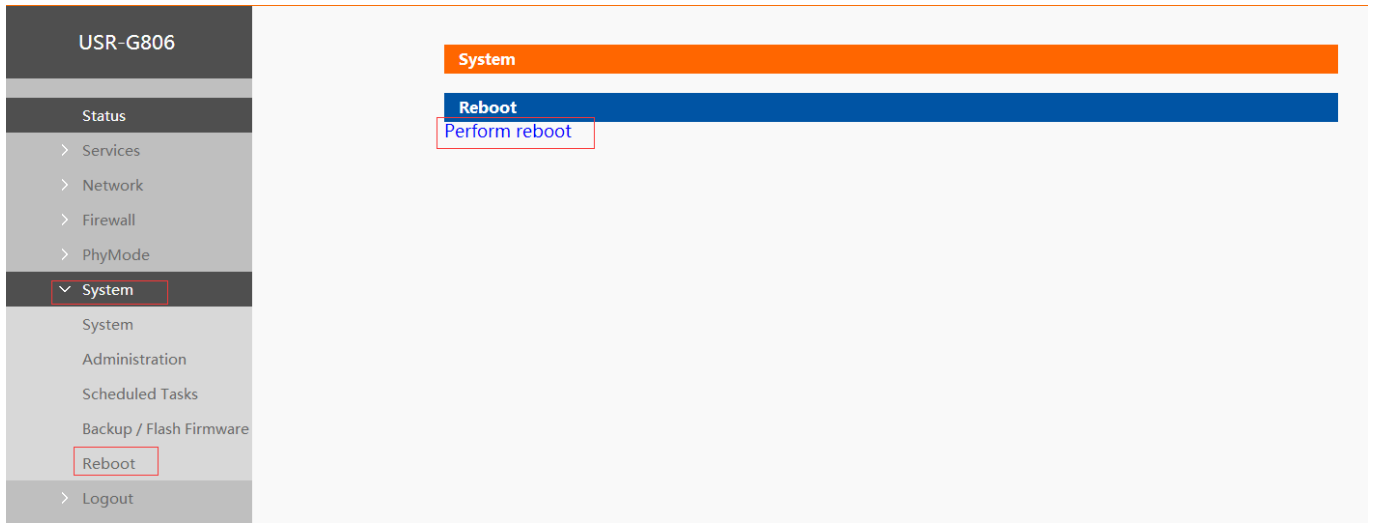


Figure 26 Reset module

### 3. Web Server


When user need to configure the G806-A, user can connect PC to USR-G806-A through LAN interface or WLAN, then open Web Server.

Default parameters of G806-A as follows:

SSID	USR-G806-XXXX
IP Address	192.168.1.1
User name	root
Password	root
WLAN Password	www.usr.cn

**Figure 27 Default parameters**

Take default parameters as example: User can connect PC to SSID USR-G806-XXXX. Then open browser and enter 192.168.1.1, log in with User name and Password(both are root), user can enter Web Server.

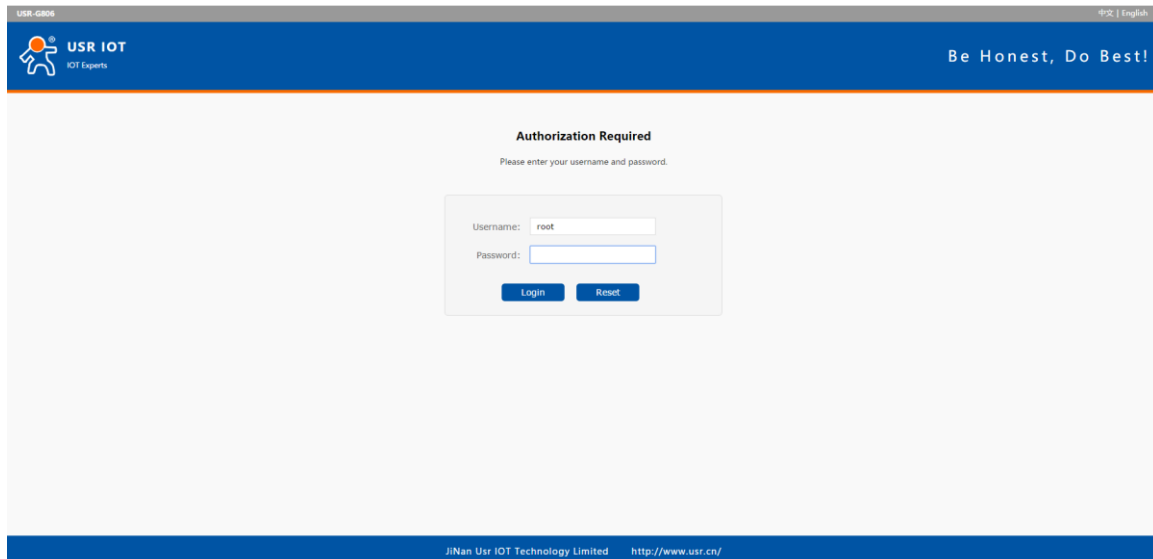

**Figure 28 Web Server login web**

User can change the language between Chinese/English in the top right corner.



## 4. Contact us

**Company:** Jinan USR IOT Technology Limited

**Address:** Floor 11, Building 1, No. 1166 Xinluo Street, Gaoxin District, Jinan, Shandong, 250101, China

**Web:** [www.usriot.com](http://www.usriot.com)

**Support:** [h.usriot.com](http://h.usriot.com)

**Email:** [sales@usr.cn](mailto:sales@usr.cn)

**Tel:** 86-531-88826739

## 5. Disclaimer

This document provides the information of USR-G806-A products, it hasn't been granted any intellectual property license by forbidding speak or other ways either explicitly or implicitly. Except the duty declared in sales terms and conditions, we don't take any other responsibilities. We don't warrant the products sales and use explicitly or implicitly, including particular purpose merchant-ability and marketability, the tort liability of any other patent right, copyright, intellectual property right. We may modify specification and description at any time without prior notice.

## 6. Updated History

2018-01-05 V1.0.4.1 established based on Chinese version V1.0.4 and G806 English version user manual V1.0.4.2.

2018-04-25 V1.0.4.2 updated

2018-04-26 V1.0.4.3 updated

## Appendix: G806-A certification

### ISED WARNING

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radio apparatus containing digital circuitry which can function separately from the operation of a transmitter or an associated transmitter, shall comply with ICES-003. In such cases, the labeling requirements of the applicable RSS apply, rather than the labelling requirements in ICES-003.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

SAR tests are conducted using standard operating positions accepted by the ISED with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the ISED that it does not exceed the exposure limit established by the ISED. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the ISED.

For body worn operation, this model phone has been tested and meets the ISED RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10 mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

*Le présent appareil est conforme*

*Après examen de ce matériel aux limites DAS et/ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquérir les informations correspondantes La distance minimale du corps à utiliser le dispositif est de 10 mm*

## FCC WARNING

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.